


SUOMY

SUOMY ICE TAG

Instructions for user

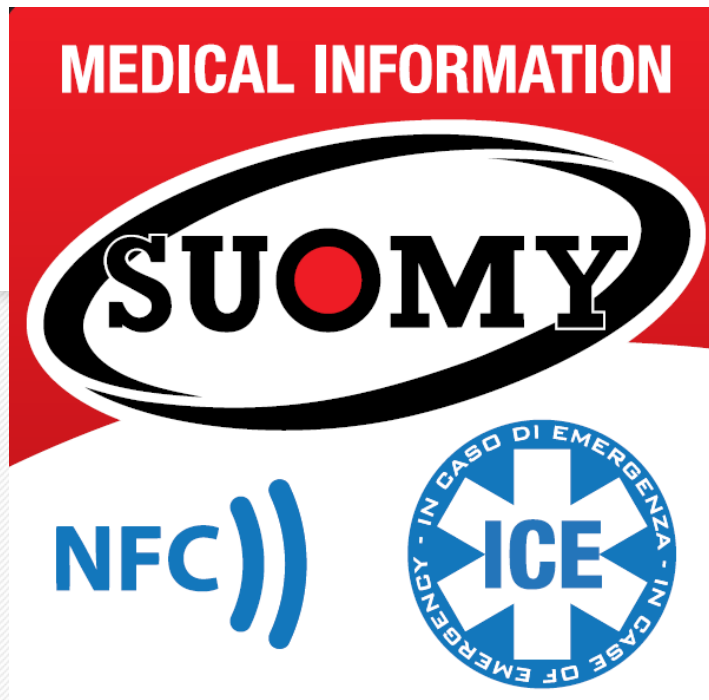

Suomy Spa

SUOMY ICE TAG SAFETY SYSTEM DEVICE



This is the innovative device designed for SUOMY Spa that using a double radio technology allows to display on a smartphone or a tablet with NFC function through a Software App all personal and medical information, to send emergency calls, to contact the family and delocalize the user if needed. SUOMY ICE-TAG is extremely versatile, can be applied to hard surfaces and / or flexible, not fear water and does not requires power supply, Wi-Fi connection or internet. SUOMY ICE-TAG can be applied to clothing and sports equipment. The SUOMY ICE-TAG App can be downloaded for free. The QR Code allows the use of the device also with mobile phones that are not equipped with NFC technology.

Software:


- Picture
- Personal data
- Contacts to call in case of emergency
- Diseases
- Medicines allergies
- Food allergies
- Surgeries
- Blood group
- Sending sms text with geolocation
- Available in 7 languages





SUOMY ICE TAG SAFETY SYSTEM DEVICE



It is necessary to download the APP from Google Play for those devices equipped with Android system.

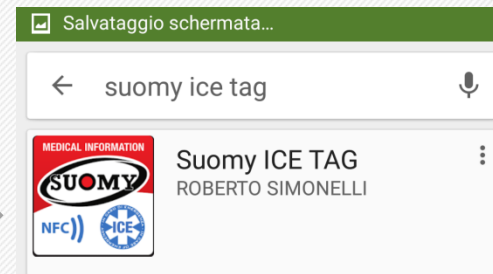

Type SUOMY ICE TAG in the section «search» of Google Play and download the App.

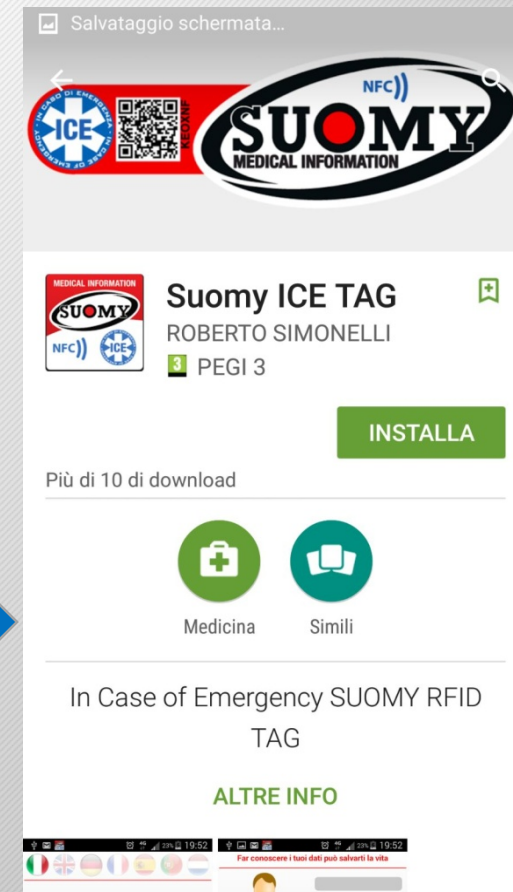

SUOMY ICE TAG SAFETY SYSTEM DEVICE



After downloading the APP on your own device, you can see the following screen.

You need to introduce an e-mail address, a password, And the activation code.
The activation code is unique for each single device and you find it next to the QR Code printed on each Ice Tag device.

A screenshot of a mobile application interface for 'SUOMY ICE TAG'. The top status bar shows signal strength, Wi-Fi, 71% battery, and 15:35. The app header includes the Suomy logo and 'ICE TAG' in a stylized font. Below the header is the title 'Dati Utente'. There are four input fields: 'EMail', 'New Password', 'Confirm Password', and 'Activation code'. The 'Activation code' field is highlighted with a blue arrow pointing from the right. At the bottom, there are three blue buttons: 'Save', 'Bypass', and 'Exit'.

Write the activation code indicated next to the QR Code that you find on the Ice Tag device.

SUOMY ICE TAG SAFETY SYSTEM DEVICE

A screenshot of a mobile application registration screen. At the top, there is a status bar with icons for signal, Wi-Fi, 70% battery, and the time 15:38. Below the status bar is the app's header with the SUOMY ICE TAG logo. The main content area is titled 'Dati Utente' and contains four input fields: 'Email' with the value 'auiromonti62@gmail.com', 'Password Nuova' with masked characters, 'Conferma Password' with masked characters, and 'Codice di Attivazione' with the value 'TGKK32'. At the bottom, there are three blue buttons: 'Salva', 'Salta', and 'Uscita'. A blue arrow points to the 'Salva' button.

After filling in every single section, click on «save».

This operation link indissolubly to the device, identified by the activation code, all the data registered by the user.




SUOMY ICE TAG SAFETY SYSTEM DEVICE



Once the registration is made, you can open the Application.








On the main screen you need to put all the data of the user.

Push button to enter the screen and fill in the data.

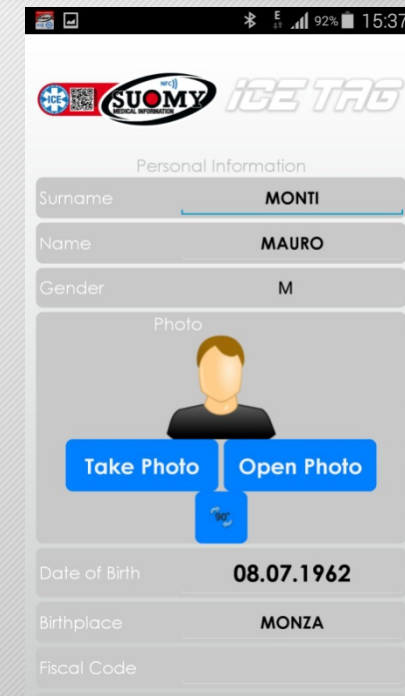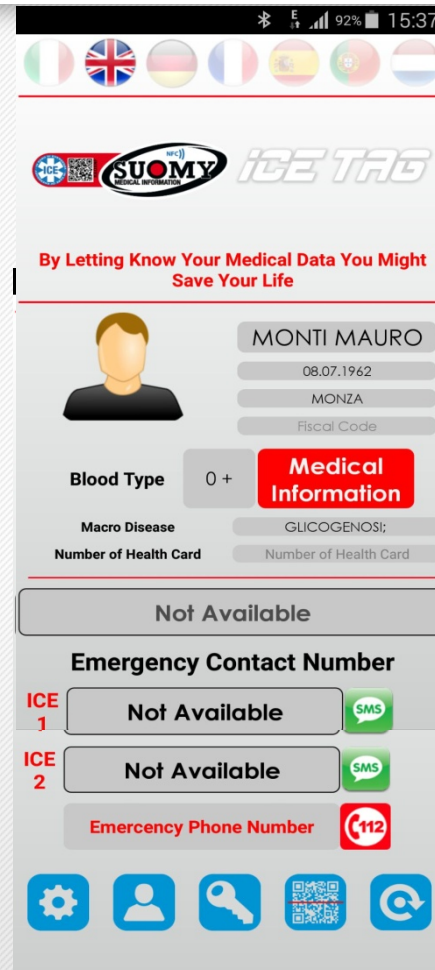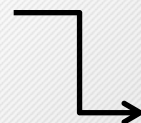

Your own picture is very important. In fact it allows the rescuer to be sure that the data saved really belong to the person who needs to be helped.

SUOMY ICE TAG SAFETY SYSTEM DEVICE

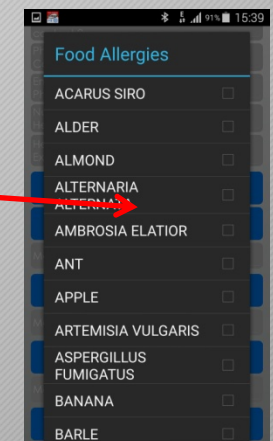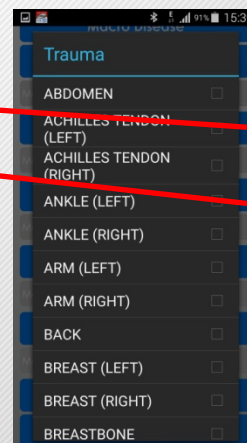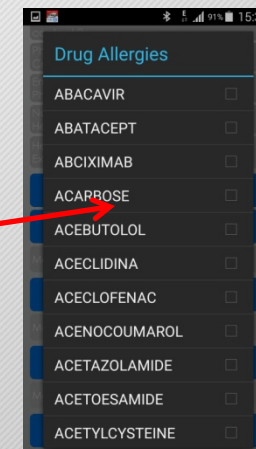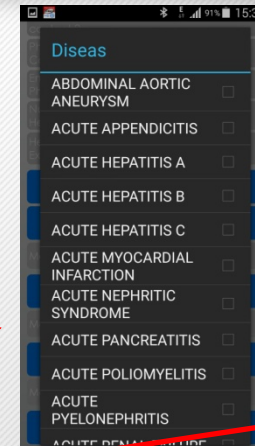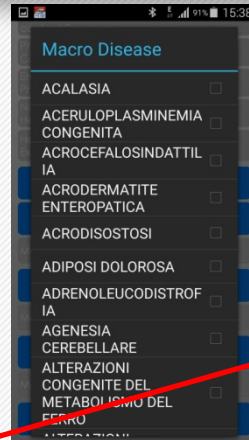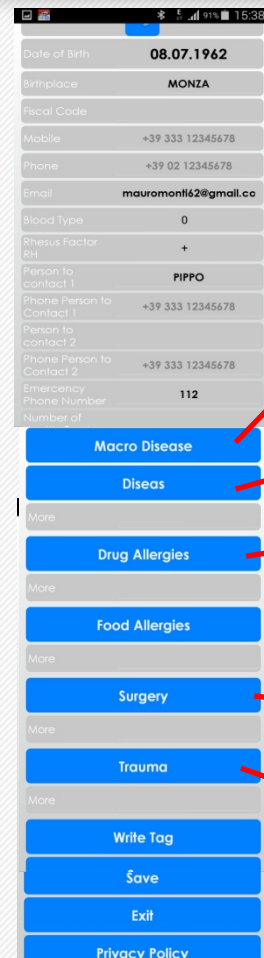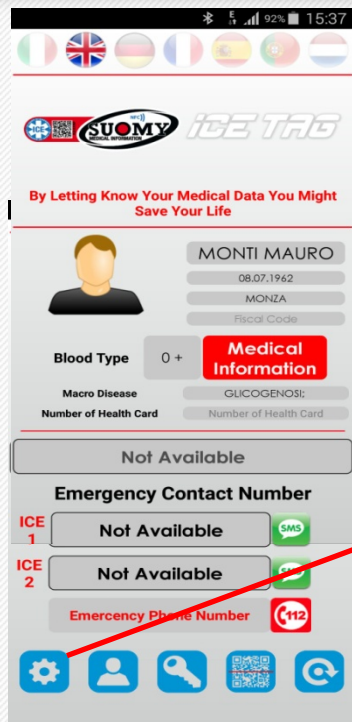


Klik on Setting and enter the page to put all the personal data and health data of the user.

SUOMY ICE TAG SAFETY SYSTEM DEVICE




Once the registration of all the personal data is made and saved, click on «write Tag».
Put the phone near the Ice Tag and all the saved data will be automatically transferred to the Ice Tag device itself.

All the saved data, beside being transferred to the device itself (Suomy Ice Tag) are saved on a data base (cloud). This operation allows the rescuer who is not equipped with NFC Android System (for ex. I-Phone) to have access to the medical information of the user simply using the QR Code printed over the Ice Tag, getting the data on the database (cloud) previously saved. The data on the Cloud can be reached connecting to www.icek.it , putting e-mail address and password.

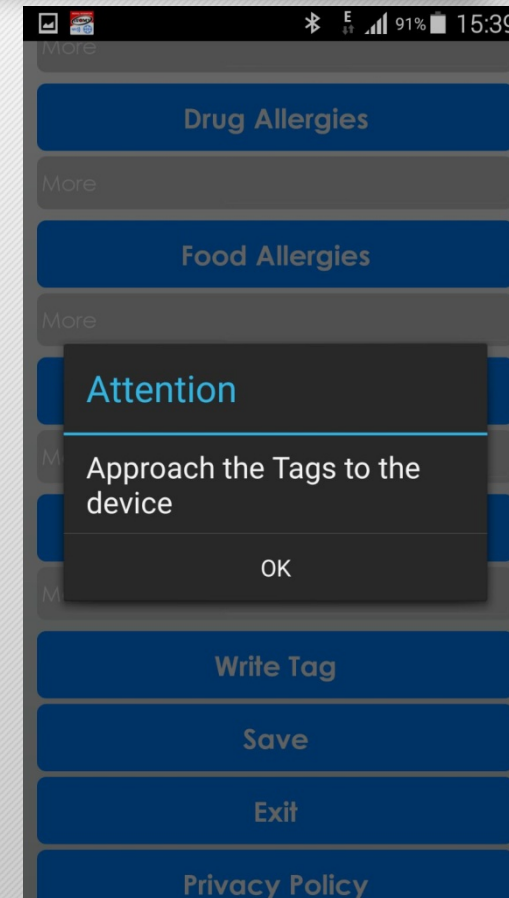


SUOMY ICE TAG SAFETY SYSTEM DEVICE

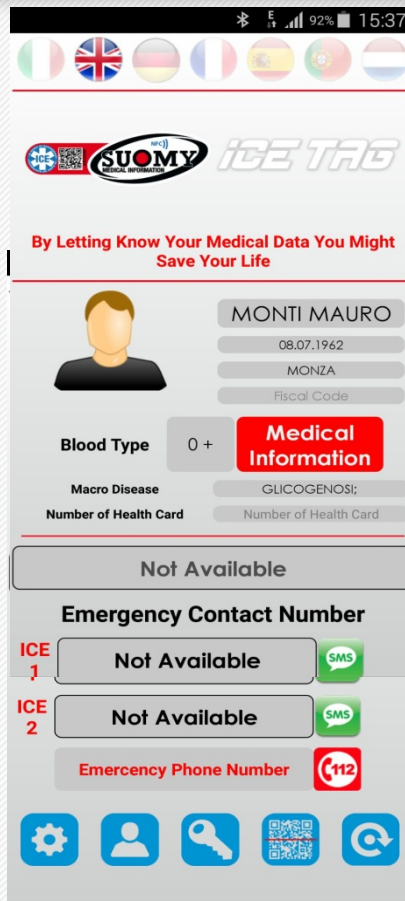

The rescuer will have access to the information of the user.





The rescuer can immediately see the list of persons to contact in case of emergency and a report with all the medical information of the user.

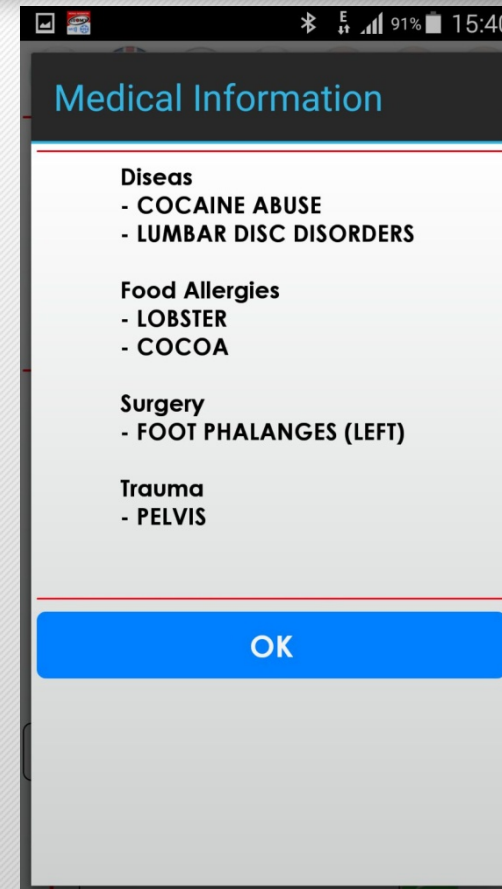

SUOMY ICE TAG SAFETY SYSTEM DEVICE





At any time it is possible to change the password by clicking on the pertinent icon.
To do that, you are asked to put the old password and the new one (which needs to be confirmed).

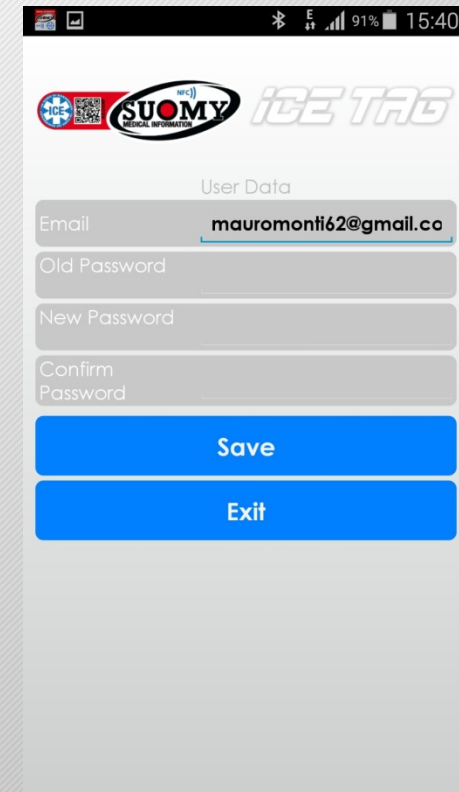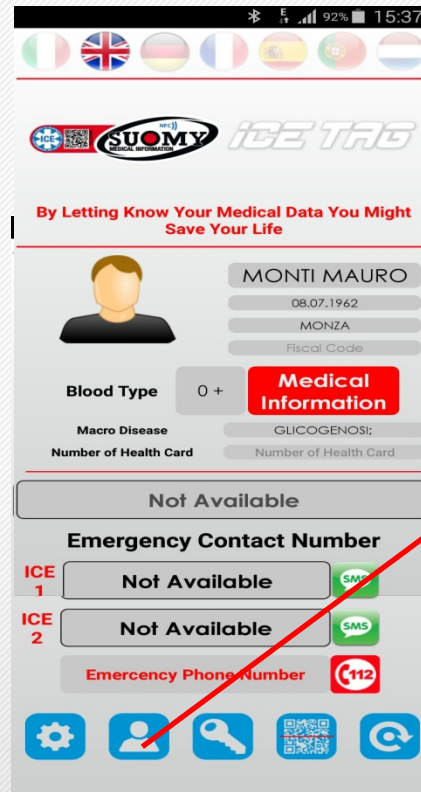

SUOMY ICE TAG SAFETY SYSTEM DEVICE



If on the device there are APP able to read QR Codes, it is possible to activate them clicking directly on the App «QR Code reader» that you find on the lower part of the homepage.

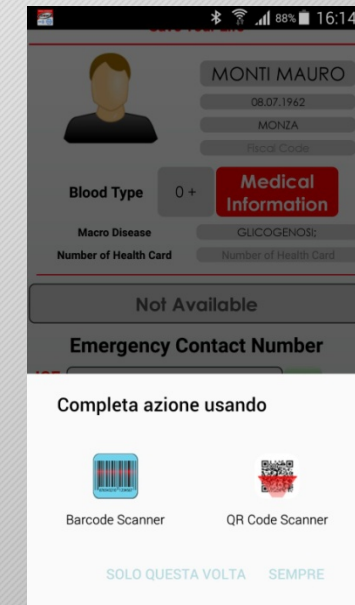
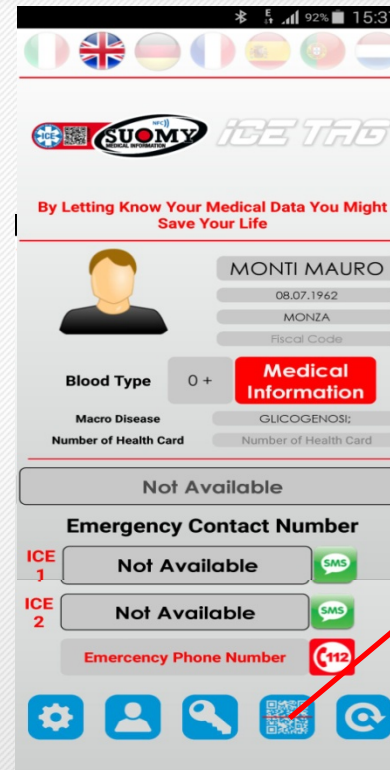


SUOMY ICE TAG SAFETY SYSTEM DEVICE



If the password is lost, you can recover it clicking on the icon showing a Key, down the homepage.


Clicking on «recover password» the password will be sent again to the e-mail address indicated in the registration process.

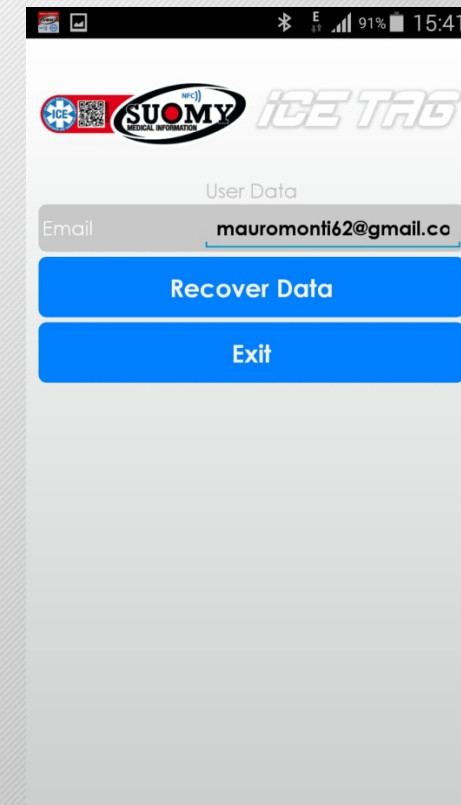
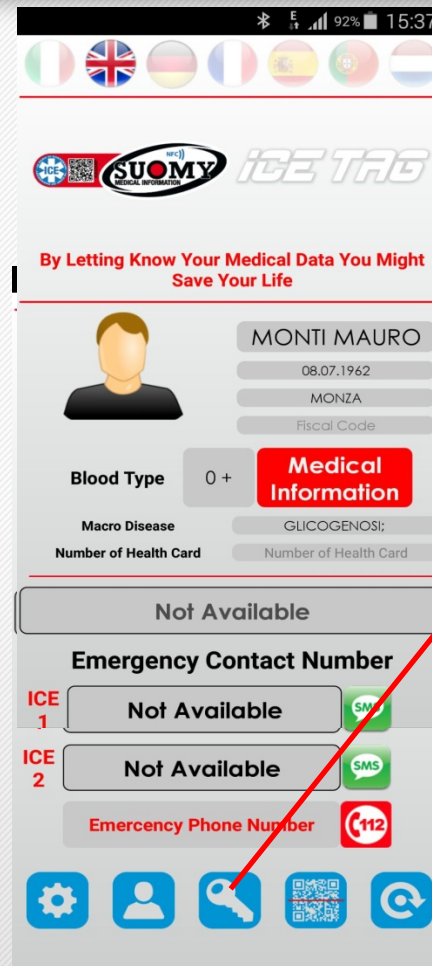


SUOMY ICE TAG SAFETY SYSTEM DEVICE



Inside the SUOMY ICE TAG App there is also the direct link to the App «Where are U» of the 118 AREU Lombardia.

Clicking on the icon  you send a call to the Operation Center NEU (Unique Emergency Number) who will be able to identify the geographical position of the call, which can be disclosed also without GPS signal (cells phone).

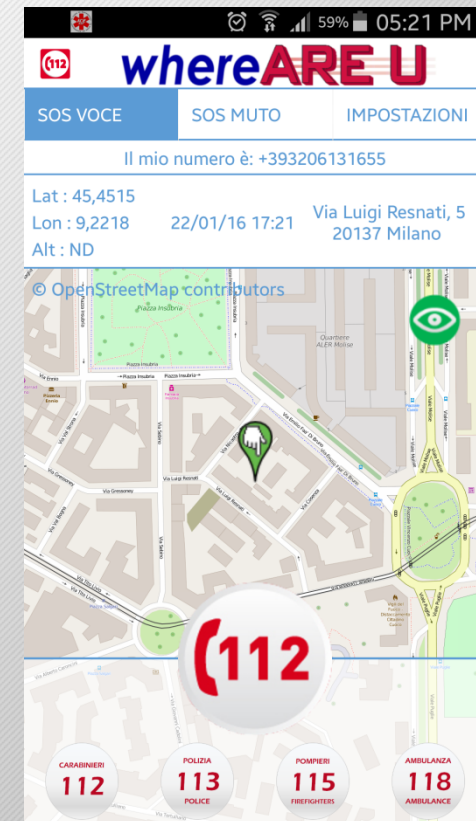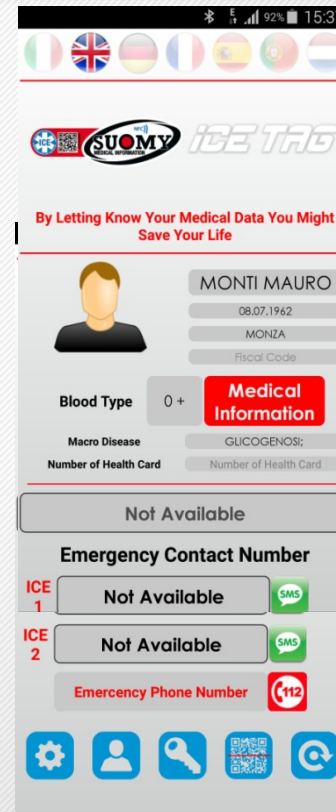

SUOMY ICE TAG SAFETY SYSTEM DEVICE



Icek.it Cloud

Connecting to the web www.icek.it by your own credentials, you will be linked to your own web page where is possible to modify the personal and medical data, unload personal file (Identity Card, Passport, vehicle registration) unload medical tests, medical certificates, medical prescriptions and put therapies and dosage of medicines. All the data will be available to the user all over the world, through simply internet connection. The data on the cloud will be always saved on the mobile App through the automatic synchronization.

